

Nikon Cameras																																																							
	D5	D4s	D4	D3x	D3s	D3	D2Xs	D2Hs	D2H	D1	Df	D850	D810	D800E	D800	D750	D700	D610	D600	D500	D300s	D300	D200	D100	D7500	D7200	D7100	D7000	D5600	D5500	D5300	D5200	D5100	D5000	D3400	D3300	D3200	D3100	D3000	D90	D80	D70 / D70s	D60	D50	D40 / D40X	Coolpix A	Coolpix P7700	Coolpix P5100	Coolpix P5000						
Nissin Model																																																							
Air 10s Commander	-	●	●	●	●	●	○	○	○	○	○	●	●	●	●	●	●	●	●	●	●	●	●	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○			
Air 1 Commander	+	+	+	●	●	●	○	○	○	○	○	●	●	●	●	●	●	●	●	●	●	●	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	
Di700 A	●	●	●	●	●	●	○	○	○	○	○	●	●	●	●	●	●	●	●	●	●	●	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	
i60A	●	●	●	●	●	●	○	○	○	○	○	●	●	●	●	●	●	●	●	●	●	●	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	
i40	●	●	●	●	●	●	○	○	○	○	○	●	●	●	●	●	●	●	●	●	●	●	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	
MF18	●	●	●	●	●	●	○	○	○	○	○	●	●	●	●	●	●	●	●	●	●	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○		
MG8000 Extreme	●	●	●	●	●	○	○	○	○	○	○	●	●	●	●	●	●	●	●	●	●	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	
Di866 Mark II	+	●	●	●	●	●	○	○	○	○	○	●	●	●	●	●	●	●	●	●	●	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○		
Di700	○	●	●	●	●	●	○	○	○	○	○	●	●	●	●	●	●	●	●	●	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	
Di600	○	●	●	●	●	●	○	○	○	○	○	●	●	●	●	●	●	●	●	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○

- Compatible Model
- Incompatible Model
- No information available. To be confirmed.

- *1 Extremely underexposure (about -2EV) appear when Air 1 mounted on D5 to control wirelessly the slave flash and the flash light does not hit the subject directly, such as bouncing or diffusing.
- *2 In D4 - D4s, when manual flash is set, when you shoot continuously and rapidly manually in the Q mode - 1 sheet shooting mode, emission may be missing. Please understand that it is based on specifications.
- *3 At the time of FP flash, it may be underexposed by about 1 stage compared with the genuine strobe
- *4 SD Mode not supported
- *5 Commander / Flash unit may be freeze when camera turn on the electronic shutter mode with mirror up mode. If Commander / Flash unit freezes, remove and re-insert the battery. Turn off the in-compatible function of camera then power on Commander / Flash unit again.

	Nissin Flashes										Nikon Flashes																																											
	H40 Nikon	Di466 Nikon	Di600 Nikon	Di622 Mark II Nikon	Di700 Nikon	Di866 Nikon	Di866 Mark II Nikon	MG8000 Nikon	SB-500	SB-600	SB-700	SB-800	SB-900	SB-910	SB-5000																																							
Air R Receiver Nikon	●	●	●	+	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●

- Compatible Model
 - Air R's GN Mode. 25-49
 - Air R's GN Mode. 50-65
- *5 FP/HSS high speed sync function not supported

Sony Cameras																																																										
	a9	a7S Mark II	a7S	a7R Mark III	a7R Mark II	a7R	a7 Mark III	a7 Mark II	a7	a6500	a6300	a6000	a3000	NEX-7	NEX-6	a99 Mark II	a99	a77 Mark II	a77	a65	a58	a57	a55V	a33	a900	a850	a700	a580	a560	a550	a500	a450	a390	a380	a350	a330	a300	a290	a230	a200	a100	RX1R Mark II	RX1	RX10	RX10 Mark II	RX10 Mark III	RX100 Mark II	HX400V	HX60V									
Nissin Model																																																										
Air 10s Commander	New	—	—	●	●	●	—	●	●	●	—	●	●	●	●	—	●	●	—	●	●	●	○	○	○	●	●	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	—	●	●	—	—	○	—	●					
Air 1 Commander		●	●	●	●	●	●	●	●	●	●	●	○	●	●	●	●	●	●	●	●	●	○	○	○	●	●	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○			
Di700 A		●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○			
i60A		●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	
i40		●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○

- Compatible Model
 - incompatible Model
 - No information available. To be confirmed.
- *1 Use the Sony Shoe Adaptor (ADP-AMA)
- *2 It slightly interferes (contacts) with the EVF. Since you can not use EVF, it can not be used because diopter correction does not work by interfering.
- *4 For using with those Sony camera models, not support the Air R's HSS High-speed sync function :: a9, a7R Mark III, a7R Mark II, a7S Mark II, a7 Mark III, a7 Mark II, a99 Mark II, a6500

	Nissin Flashes			Sony Flashes					
	i40 Sony	Di622 Mark II/Sony	Di866 Mark II/Sony	HVL-F32M	HVL-F42AM	HVL-F43M	HVL-F58AM	HVL-F60M	
Air R Receiver Sony *4	●	●	●	●	●	●	●	●	

- Compatible Model
 - GN Mode. 25-49
 - GN Mode. 50-65
- *1 Use the Sony Shoe Adaptor (ADP-AMA)
- *3 Use the Sony Shoe Adaptor (ADP-MAA). Due to the design of the ADP-MAA adapter, bad contact may always occur when using ADP-MAA. Depends on the situation of use, the operation may be unstable.
- *4 For using with those Sony camera models, the HSS High-speed sync function of the flash inserted on Air R can not be used, a9, a7R Mark III, a7R Mark II, a7S Mark II, a7 Mark III, a7 Mark II, a99 Mark II, a6500

Olympus Micro Four Thirds / Four Thirds Cameras

	E-M1 Mark II (OMD)	E-M1 (OMD)	E-M5 Mark II (OMD)	E-M5 (OMD)	E-M10 Mark III (OMD)	E-M10 Mark II (OMD)	E-M10 (OMD)	PEN-F	E-P5	E-P3	E-P2	E-P1	E-P7	E-P6	E-P5	E-P3	E-P2	E-P1	E-PM2	E-PM1	E-620	E-520	E-500	E-410	E-30	
Nissin Model																										
Air 1 Commander (Four Thirds ver.)	●	●	●	●	○	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●
D1700 A (Four Thirds ver.)	●	●	○	●	○	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●
i60A (Four Thirds ver.)	●	●	+	●	○	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●
i40 (Four Thirds ver.)	+	●	+	●	○	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●
Di466 (Four Thirds ver.)	-	●	○	●	-	○	●	○	●	●	●	●	○	●	●	●	●	●	●	●	●	●	●	●	●	●

- Compatible Model
- Incompatible Model
- No information available. To be confirmed.

*1 Unstable operation may appear when turn on the S-OVF Function (Optical view finder simulation) of EVF and shoot with EVF.
 *2 Flash's optical slave wireless mode is incompatible with camera's wireless flash system.

Panasonic Micro Four Thirds Cameras *3

	GH5	GH4	GH3	GH2	GH1	GX8	GX7	GX7 Mark II / GX85 / GX80	GX1	G10	G9	G8 / G80 / G85	G7 / G70	G6	G5	G3	G2	G1	GF2	GF1	LX100	LX7	LX5	LX3	FZ200	
Nissin Model																										
Air 1 Commander (Four Thirds ver.)	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●
D1700 A (Four Thirds ver.)	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●
i60A (Four Thirds ver.)	●	-	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●
i40 (Four Thirds ver.)	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●
Di466 (Four Thirds ver.)	-	●	●	●	●	○	●	○	●	●	-	-	○	●	●	●	●	●	●	●	●	●	●	●	●	●

- Compatible Model
- Incompatible Model
- No information available. To be confirmed.

*3 According to the specifications of Panasonic Lumix series, the continuous shooting function cannot be used when an external flash is installed on the hot shoe.

Fujifilm Cameras																												
	GFX 50s	X-H1	X-T2	X-T1 / X-T1 GS	X-T20	X-T10	X-Pro2	X-Pro1	X-E2S	X-E3 <i>New</i>	X-E2	X-E1	X-M1	X-A2	X-A1	X100F	X100T	X100S	X100	X70	X30	X20	X10	X-S1	H550EXR	H530EXR	H520EXR	
Nissin Model																												
Air 1 Commander	● ^{*1}	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	○
D1700 A	● ^{*1}	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	○
i60A	● ^{*1}	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	○
i40	● ^{*1}	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	○

- Compatible Model
- Incompatible Model
- Flash supports HSS/FP High speed synchronize function on this camera.

^{*1} The Fujifilm camera is supporting of High speed synchronize function after camera firmware updated.
^{*2} Flash can be insert on the hot shoe of main body or that of EVF. When inserted a flash on the EVF shoe, do not fill-up EVF since this may make the EVF damage.